



Owner's manual  
**Media System Touch**  
**Media System Colour**

Leon  
Toledo



## About this manual

This manual contains information, recommendations, suggestions and advice about your radio system. The other sections of the on-board documentation also contain important instructions that both driver and passengers must be aware of for their own safety.

Ensure that the on-board documentation is kept in the vehicle at all times. This is especially important when lending or selling the vehicle to another person.

This manual describes the **features** of the vehicle at the time of drafting this text. Some of the features described below will be introduced in the future or will only be available in certain markets.

Some details on the **drawings** may vary from its vehicle and must be interpreted as a standard representation.

The **colour of the display** and the information displayed on it may vary depending on the model of your vehicle.

The **component location instructions** are based on the direction of the vehicle unless otherwise specified.

The **audiovisual material** is only meant to help the users better understand some features of the car. It is not a replacement for the instruction manual. Access the instruction manual to see the complete information and warnings.

- \* The **features marked with an asterisk** are included by default only in certain versions of the model, supplied as optional only for certain versions or only offered in certain countries.
- ® **Trademarks** are marked with ®. The absence of this symbol does not guarantee that the term is not a trademark.
- >> It indicates that the section continues on the next page.

### **WARNING**

Texts after this symbol contain information about safety and warn you about possible accident or injury risks.

### **CAUTION**

Texts after this symbol indicate possible damage to the vehicle.

### **For the sake of the environment**

Texts after this symbol contain information about the protection of the environment.

### **Note**

Texts after this symbol contain additional information.




## Table of Contents

<b>Overview</b> .....	4
Unit overview .....	4
Main menus .....	5
<b>Introduction</b> .....	7
General operating information .....	7
<b>Radio</b> .....	12
Radio mode .....	12
<b>Media</b> .....	19
Media mode .....	19
<b>Telephone management system*</b> .....	27
Introduction to the telephone management system .....	27
Description of the telephone management system .....	30
<b>Car menu</b> .....	37
Introduction to using the Vehicle menu .....	37
<b>Settings</b> .....	40
Menu and system settings .....	40
Sound and volume setup .....	41
<b>Index</b> .....	43

# Overview

## Unit overview

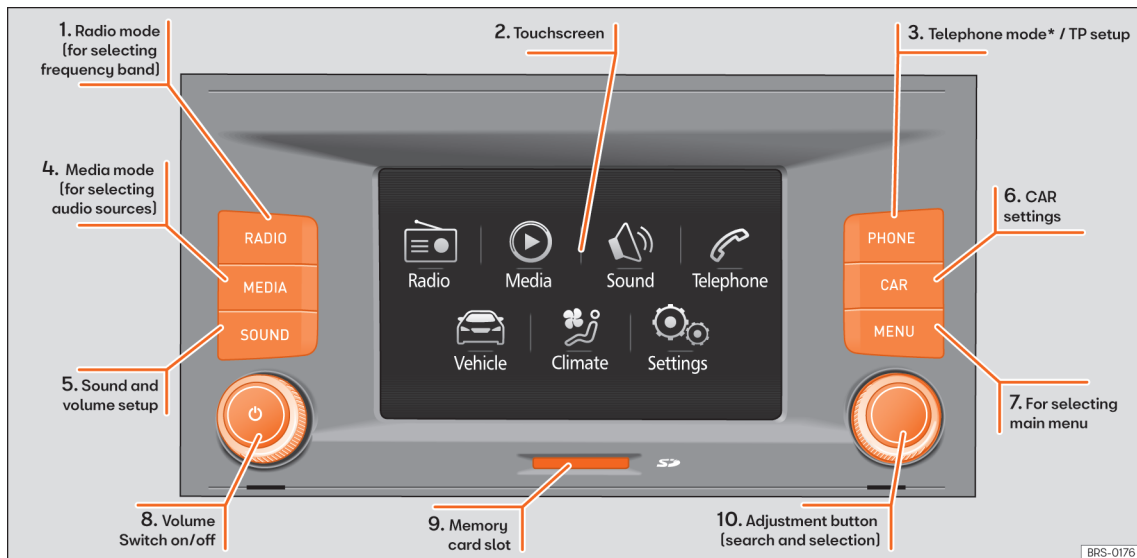

BRS-0176

**Fig. 1** Overview of the controls

① »»» page 12

② »»» page 9

③ »»» page 27 / »»» page 16

④ »»» page 19

⑤ »»» page 41

⑥ »»» page 37


⑦ »»» page 40

⑧ »»» page 8

⑨ »»» page 23

⑩ »»» page 8



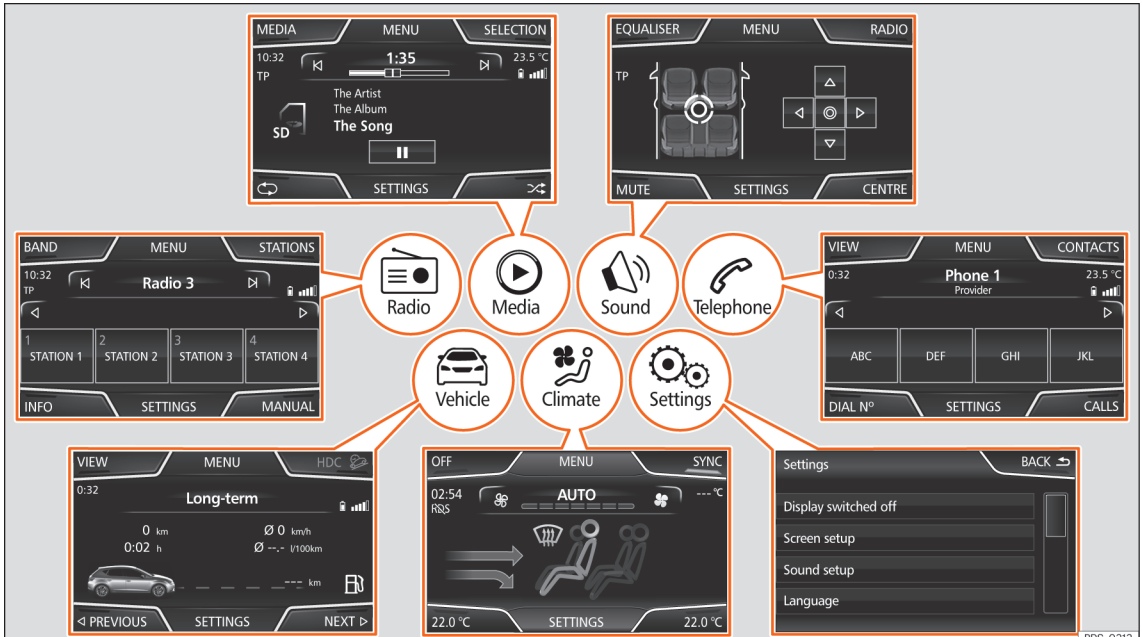




Main menus



BRS-0313

Fig. 2 Summary of the menus.



	<b>Radio</b> » page 12	Main menu RADIO » page 12 Radio data services RDS » page 13 Digital radio mode » page 14 Memory buttons » page 15	Select, tune and store stations to memory » page 15 SCAN » page 16 Traffic information TP » page 16 Settings » page 17
	<b>Media</b> » page 19	Media sources and audio files » page 19 Playing order » page 20 Changing the media source » page 21 Memory card » page 23	External player with Bluetooth® » page 25 Change track » page 22 Select a track » page 22 Settings » page 26 USB/AUX-IN » page 24, » page 26
	<b>Sound</b> » page 41	Sound and volume setup » page 41	
	<b>Telephone</b> » page 27	Pairing » page 29 Bluetooth® » page 28 Function buttons » page 30 Active call » page 30	Entering number » page 32 Phonebook » page 33 Call list » page 34 Setup » page 35
	<b>Vehicle</b> » page 37	Journey » page 37 Status » page 39	Tyres » page 39 Consumers » page 37
	<b>Air conditioning</b>	» Booklet Instruction Manual	
	<b>Setup</b> » page 40	Display Language Date and time	Units Factory settings

## Introduction

### General operating information

#### Safety notes

Travelling on today's roads requires the driver's full attention at all times.

Only operate the radio and its various functions when the traffic situation really permits this.

#### WARNING

- Before starting the trip, you should familiarise yourself with the different radio functions.
- High audio volume may represent a danger to you and to others.
- Adjust the volume in a way that you can distinguish surrounding noise, for example, horns and sirens, etc.
- Radio settings should be made when the car is stopped or by a passenger.

#### WARNING

Distracting the driver in any way can lead to an accident and cause injuries. Operating the infotainment system while driving can distract your attention from the traffic.

- Always drive carefully and responsibly.
- Select volume settings that allow you to easily hear signals from outside the vehicle at all times (e.g. emergency service sirens).
- If you set the volume excessively high you may suffer damage to your ears. This can also happen if you are exposed to an excessively high volume even for a short time.

#### WARNING

The volume level may suddenly change when you switch audio source or connect a new audio source.

- Reduce the base volume before switching audio source or connecting a new audio source » page 8.

#### WARNING

Connecting, inserting or removing a data medium while driving can distract your attention from the traffic and cause an accident.

#### WARNING

Connecting leads for external devices may obstruct the driver.

- Arrange the connecting leads so that they do not obstruct the driver.

#### WARNING

External devices that are loose or not properly secured could be flung though the interior during a sudden driving or braking manoeuvre, or in the event of an accident.

- Never, for any reason, fit the external units on the doors, on the windscreen, on or near the area marked "AIRBAG" on the steering wheel, on the dash panel, on the seat backrests or between these areas and the passengers. These units may cause serious injury in the event of an accident, especially if the airbag is activated.

#### WARNING


The centre armrest may obstruct the driver's arm movements, which could cause an accident and severe injuries.

- Always keep the armrest closed while the vehicle is in motion.

#### Note


- Not inserting the data medium correctly, or inserting unsuitable data media, may damage the unit.
- When inserting the memory card, make sure it is in the correct position » page 23
- If you push too hard, you could damage the lock on the memory card slot.
- Only use suitable memory cards.



- The vehicle loudspeakers may be damaged if the volume is too high or the sound is distorted.
- Lightly pressing the buttons or briefly pressing the touchscreen is sufficient to operate the unit.
- It is possible that not all the functions and function buttons are available as the software of the unit responds to the specific characteristics of each market. A missing function button on the screen is not the result of an error in the unit.
- Due to country-specific legislation, certain functions cannot be selected on the screen when the vehicle is travelling above a certain speed.
- Using a mobile telephone inside the vehicle can cause noise in the speakers.
- There may be restrictions on the use of Bluetooth® devices in some countries. Information is available from the local authorities.
- In some vehicles equipped with a parking distance warning system, the volume of the audio source is automatically lowered when the gear is engaged.
- If the steering wheel has a voice control button , it will not work in this radio model, so it has no function in relation to the radio.


## Rotary knobs and buttons

### Rotary knobs

The left-hand rotary knob  **»» Fig. 1 ⑧** is used as the volume control or on/off button.


The right-hand rotary knob **»» Fig. 1 ⑩** is used as the setup button.

### Infotainment buttons

In these instructions, the unit buttons are depicted by the word "infotainment button" and their function is shown inside a rectangle (for example: infotainment button .

The infotainment buttons are operated by *pressing them* or holding them down.

## Switching on and off

To manually switch the Infotainment system on and off, briefly press the right rotary knob  **»» Fig. 1 ⑧**.

When the unit is switched on the system starts up. The last active audio source will be played with the volume set, as long this does not exceed the maximum, predefined switch-on volume **»» page 41**.

 

 

The unit will switch off automatically when the key is removed from the ignition or when the on/off button is pressed (depending on the equipment fitted or the vehicle). If you

turn the unit back on after the engine has been switched off, it will turn off automatically after approximately 30 minutes (delayed switch-off).

### Note

- **The unit is linked to the vehicle. It cannot be used in any other vehicle.**
- **If only the battery has been disconnected from the vehicle, the vehicle must be started before turning the unit back on.**




## Adjusting the base volume


Function	Use
Increase the volume.	Turn the volume control  clockwise or move the thumbwheel on the multifunction steering wheel upward  <b>»» Booklet Instruction Manual</b> .
Lower the volume.	Turn the volume control  clockwise or move the thumbwheel on the multifunction steering wheel downward  .

The volume modification is shown on the screen with a bar.

It is possible to preset certain volume settings and adjustments **»» page 41**.

### Silence the unit


- Turn the volume control  anticlockwise until you see .
- **OR:** Press the **MUTE** function button  **»» Fig. 4<sup>1)</sup>**.

While the unit is muted, the active media source is paused.  is displayed on the screen.


#### Note

If the basic playback volume of an audio source has been increased substantially, lower the volume before changing to another audio source.

### Operating the function buttons on-screen

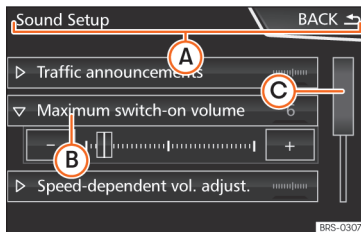

**Fig. 3** View of possible function buttons.

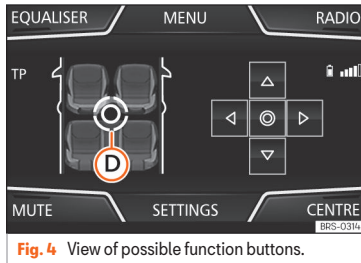


**Fig. 4** View of possible function buttons.

The unit is equipped with a touchscreen.

Active areas of the screen that call up a certain function are called “function buttons”.





These buttons are operated by *briefly pressing* the screen or by *pressing and holding*.

The function buttons appear in the instructions with the label “function button” and a button symbol .

Function buttons start functions or open sub-menus. The menu currently selected is shown in the submenus title line **»» Fig. 3 (A)**.

The function buttons that appear deactivated (in grey) may not be selected at that time.

### Summary of the indications and function buttons

	Operation and effect
	The title line shows the menu selected at that time and, if applicable, other function buttons <b>»» Fig. 3</b> .
	Press to open an additional menu <b>»» Fig. 3</b> .
	Move the control around the screen by pressing lightly, without lifting your finger <b>»» Fig. 3</b> .
	Move the cursor around the screen by pressing lightly, without resting your finger on the screen; the cursor will move to this position <b>»» Fig. 4</b> . <b>»»</b>

<sup>1)</sup> According to version

	Operation and effect
BACK ↩	Briefly press to return progressively to the main menu from a submenu, or to undo the changes made.
▽	Press briefly to open a pop-up window with additional setup options. To close the pop-up window briefly press outside of it or select an option.
☑ / ☐	Activated/deactivated function. Some functions or instructions are marked with a checkbox, and are activated or deactivated by touching them briefly.
OK	Briefly press to confirm the data entered or to select.
x	Briefly press to close a pop-up window or a data entry screen.
+ / -	Briefly press to modify the setup progressively.
SET-TINGS	To activate the setup of the menus and systems.
MENU	Go to menu selection.

## Activating the list entries and searching through the lists

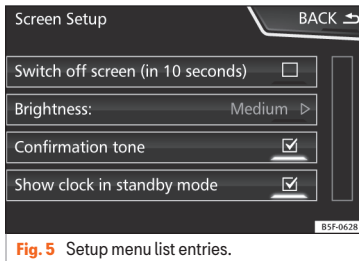


Fig. 5 Setup menu list entries.

### Select and activate the list entries with the setting knob or by pressing directly on the screen.

- Search an item of the list by *turning* the adjustment knob: each entry of the list will be highlighted until the one you are searching for is found.
- Press the setting knob to activate the selected list entry.

### Scrolling through the list

If a list contains more elements than can be viewed on the screen, a scroll bar will be shown on the right of the screen »» Fig. 3 ©.

- Scroll down a list: turn the settings knob.

- To quickly scan through a long list: Place your finger on the scroll marker and move it downwards over the screen without losing contact. Lift your finger off the screen when you reach the desired position.

## Additional information and display options

The information on the screen can vary depending on the settings and may differ from the descriptions shown here.

The main screens show the current time and outdoor temperature.

All information is displayed just after fully starting up the infotainment system.

## Initial configuration wizard

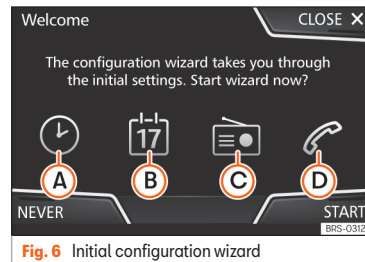


Fig. 6 Initial configuration wizard

The initial configuration wizard will help you to set up your Infotainment system the first time you switch it on.

Every time you switch on the Infotainment system, the initial setup screen will appear »» **Fig. 6** if any parameters have not been set or if the **NEVER** function button has not been pressed.

#### Function button: function

<b>CLOSE</b>	Closes the Configuration Wizard, and the main menu or last mode in which you used the Infotainment system will appear. The next time you switch on the system, the Configuration Wizard will start up again.
<b>NEVER</b>	Disables the possibility of changing the settings of the Infotainment system. If you want to perform the initial system setup, you must enter via <b>System setup</b> and select <b>Configuration Wizard</b> »» page 40.
<b>START</b>	Starts up the Configuration Wizard.
<b>A</b>	Press to set the time.
<b>B</b>	Press to set the date.
<b>C</b>	Press to search and store to memory the radio stations that have the best reception at that moment.
<b>D</b>	Press to link your mobile telephone to the Infotainment system.

#### Function button: function

<b>PREVIOUS</b>	To go to the previous or next parameter to set. When a parameter has been set, the only way to reset it is from the main menu, clicking on it, and not using the <b>Previous/Next</b> buttons.
<b>NEXT</b>	When setting any parameter, a confirmation mark will appear on it <input checked="" type="checkbox"/> .
<b>FINISH</b>	Once one or more settings have been applied, click on this in the main menu of the wizard to confirm and finalize the settings. If there are any parameters you have not set, the next time you connect the Infotainment system, the Initial Configuration Wizard will start up.

## Radio

### Radio mode

#### Introduction

##### Note

- Please bear in mind that in car parks, tunnels, areas with high buildings or mountains the radio signal can be impaired.
- Foil or metal-coated stickers attached to the windows may affect reception on vehicles with a window aerial.
- The availability of AM and DAB bands depends on the country and/or equipment.
- The radio stations are responsible for the content broadcast.

#### RADIO main menu



Fig. 7 RADIO main menu.







 

Fig. 8 Station list.

Press the infotainment button **RADIO** to open the Radio main menu »»» Fig. 7.

#### Radio main menu function buttons

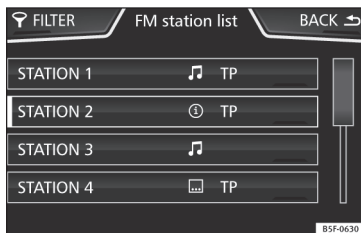Function button: function	
<b>BAND</b>	Allows you to select the frequency band and memory bank.
<b>STATION LIST</b>	Opens the list of currently receivable radio stations »»» page 15.
<b>MANUAL</b>	Allows you to select the frequency manually »»» table on page 15.
<b>SETTINGS</b>	Opens the setup menu of the active frequency band »»» page 17.
<b>INFO</b>	Allows you to view the radio text of the selected station.
<b>◀ or ▶</b>	Selects the previous/next stored station (or available station). Arrow buttons setup in the Setup (FM, AM, DAB) menu »»» page 17.
<b>◀ or ▶</b>	Change between station banks.
<b>SCAN</b>	Stops the station scan function (only visible when the function is running) »»» page 16.
<b>1 to 12</b>	Memory buttons »»» table on page 16.
<b>Updating</b>	Updates the list of stations (AM/DAB) »»» page 15.

## Information and possible icons

Display: Meaning	
	The RDS radio data service is disabled.
	Traffic news is available .
	No stations with traffic news are available.
	The tracking of alternative frequencies is disabled.
	The radio station is stored in a memory button.

## Radio Data Services RDS (FM band)

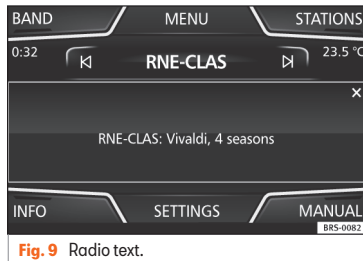


Fig. 9 Radio text.

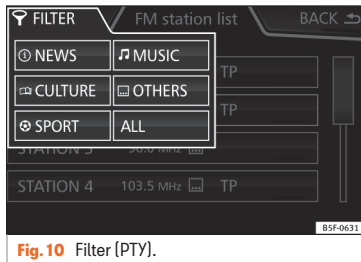


Fig. 10 Filter [PTY].

The RDS (Radio Data System) offers additional information in FM such as the visualisation of the station name, automatic station tracking (AF), text broadcast by radio (Radio Text »» Fig. 7), traffic announcements (TP) and station type (PTY).

Depending on the country and the unit in question, the RDS can be deactivated in the FM Settings menu »» page 17.

Without RDS **it is not possible to obtain radio data services.**

## Station name and automatic station tracking

When the RDS is available, you can view the names of the stations providing this service in the *RADIO* main menu and in the **List of FM stations**.

The FM stations send different contents under one name (for example, Radio 3) in various re-

gional frequencies, provisionally or permanently »» Fig. 7.

When driving, the automatic station tracking automatically changes to the frequency that provides the best reception of the currently-selected station. However, this can interrupt the regional station currently tuned.

The automatic changing of frequencies and automatic station tracking can be configured through FM Settings »» page 17.

## Set a station name

In some cases the name of the station is too long. This text may be blocked/unblocked by pressing on the station name for 3 seconds. A dot will appear/disappear to the left or right of the station name.

## Radio text

Some RDS-enabled stations also broadcast additional text information known as radio text. The *INFO* button allows you to view the radio text.

## Filter by station type (PTY)

With the RDS activated, stations may provide information on their broadcast content (news, music, culture, etc.). As seen in figure »» Fig. 10, it is possible to filter stations by their content. »»

**Note**

- Due to matters of infrastructure, RDS functions may be limited in certain countries, and you may not be able to receive traffic announcements, automatic station tracking (AF) or programme types (PTY). The TP button will not function in these countries.

## Digital radio mode (DAB, DAB+ and DMB audio)\*



**Fig. 11** Main DAB RADIO menu.

The DAB radio receiver is compatible with the standards DAB, DAB+ and DMB audio.

In Europe, digital radio broadcasts on the band III frequencies (174 MHz to 240 MHz).

The frequencies of the two bands are referred to as “channels” and each has a channel name [e.g. 12 A].

Several available DAB stations are combined into one channel in an “ensemble”.

### Starting DAB radio mode

In the *RADIO* main menu, press the function key »» **Fig. 11** (BAND) and select (DAB).

The DAB radio station that was last selected will be played if it can still be received at the current location.

The station selected at that time is shown on the top line of the screen. The selected Ensemble of stations is displayed below »» **Fig. 11**.

### Additional DAB stations

Some DAB stations temporarily or permanently offer **additional programmes**, (for example, for broadcasting sports events).

Additional stations are selected in the same way as the conventional DAB stations. However, these are differentiated in the station list by the icon 2nd.

The name of the additional available station is displayed in the main DAB menu next to the symbol 2nd.

The additional stations cannot be stored.

From the main screen	Press the name of the main station
	Press the memory button of the main station
From the station list	Select the additional station from the list

### Automatic station tracking

DAB is currently **not available in all areas**. In areas without DAB, 2nd is displayed in DAB radio mode.

If reception of the currently selected DAB station is lost (e.g. no DAB reception available), the Infotainment system attempts to find the station and tune to it on the other available frequency bands. If the station still cannot be found, the radio will be muted. Automatic station tracking can be activated in the **DAB settings** in the following modes:


- **DAB-DAB station tracking:** The radio attempts to tune into the same station on an alternative DAB frequency. Automatic station tracking only works if both DAB stations transmit the same station identifier or the DAB signal indicates the corresponding other DAB station.
- **Automatic DAB - FM switching:** The radio attempts to tune into the same station on the FM frequency band. Automatic station tracking only works if the DAB station and the FM station transmit the same station identifier or

the DAB signal indicates the corresponding FM station. Once the corresponding FM station has been found, **FM** is displayed after the station name. When reception for the corresponding DAB station returns, after a short time the unit will switch back to DAB mode and **FM** will no longer be displayed.

### Radio text

Some stations also broadcast additional text information known as radio text. The **INFO** button allows you to view the radio text.

## Memory buttons

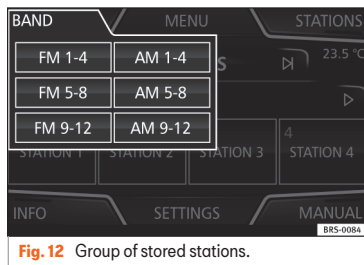

**Fig. 12** Group of stored stations.

In the **RADIO** main menu, you can store stations from all available frequency wave-lengths on the numbered function buttons. These function buttons are called “memory buttons”.

## Functions of the memory buttons

Selecting the station from the memory buttons	Press the memory button of the station you want. The stored stations can only be played by pressing the corresponding memory button, provided it can be received at your current location.
Switching between memory banks	Press the <b>[BAND]</b> function button <b>»»» Fig. 12</b> . <b>OR:</b> Press the <b>&lt;</b> and <b>&gt;</b> buttons on the touch screen. The memory buttons are displayed in three memory banks.
Storing the station on the memory buttons	See: Storing stations <b>»»» table on page 16</b> .

## Select, tune and store stations to memory

### Selecting a station

Select the station with the arrow buttons <b>[←]</b> <b>[→]</b>	Press the <b>[←]</b> or the <b>[→]</b> function button. This will change between stored or available stations, depending on the setup of the arrow buttons. Arrow buttons setup in the <b>Setup (FM, AM and DAB)</b> menu <b>»»» page 17</b> .
---	--

## Selecting a station

Selecting a station from the station list	Press the <b>[Stations]</b> function button to open the list of stations. Go through the list and select the desired station by pressing it. Press the <b>[BACK ↵]</b> function button to return to the previous screen.
To update the list of stations	The list of stations in the FM frequency band is automatically updated. For the AM and DAB frequency bands, press the function button <b>[Update]</b> to update the station list.

## Manually tuning in a station frequency.

Viewing the frequency dial	Briefly press the <b>[Manual]</b> function button.
Adjusting the frequency in stages	Press the buttons <b>+</b> , <b>-</b> , to the right and left of the frequency band. <b>OR:</b> Turn the adjustment knob.
Quickly browsing the frequency band	Place your finger on the slider in the frequency dial and drag it along the dial.
Hiding the frequency band	Briefly press the button <b>[Manual]</b> . <b>»»</b>

## Storing stations

Storing the station being listened to on a memory button	Hold down the desired memory button until you hear the signal. The station that you are listening to will be stored in this memory button.
Storing a station on the list of stations	Press the <b>Stations</b> function button to open the list of stations. Select the desired station (by holding a finger on the touchscreen or holding down the setup button) until the store display appears. Press the memory button and, after the confirmation tone, the station will then be recorded on this memory button. To store more stations from the list, press Back and repeat the process.
Deleting a stored station	The stored stations can be deleted one by one or all at once in the FM, AM and DAB setup menu.

## Scan function (SCAN)

When the scan function is running, all available stations on the current frequency band are played in sequence for about 5 seconds each.

### Starting and stopping the scan function

Starting the scan function	Press the <b>SETTINGS</b> function button and then select <b>SCAN</b> .
----------------------------	---

### Starting and stopping the scan function

Stopping the scan function	Press the <b>SCAN</b> function button to stop the scan function at the station that is currently playing. <b>OR:</b> Briefly press the adjustment knob. Manually selecting a station with the memory buttons or changing the screen also stops the scan function.
----------------------------	---

## Traffic information (TP)

Traffic information tracking with the TP function is only possible if the station is available. The stations with the traffic information function are indicated in the Radio main menu and in the list of stations by the **TP** symbol **»» Fig. 7** and **»» Fig. 8**.


Some stations that do not have their own traffic news support the TP function by broadcasting traffic announcements from other stations (EON).

### Switching the TP function on and off

- In the menu **Setup (FM, AM and DAB)**, press the function button **Traffic Program (TP)** to activate  or deactivate  this function **»» page 17**.

### Active TP function and station selection

Traffic warnings are played in Audio mode.

In **FM mode**, the station **tuned in** must have the TP function. If a station **without** the TP function is selected, this will be indicated half way up the left of the screen .

In **AM mode** or **media mode**, the unit will always automatically tune to a traffic news station in the background, provided that one is available. Depending on your location, this process can take some time.

### Incoming traffic information

In active Audio mode, an incoming traffic announcement will play automatically.

During the traffic announcement, a pop-up window is displayed and the radio changes, depending on the case, to the traffic news station (EON).

The media mode is paused and the volume is adjusted to the preset level **»» page 41**.

The volume of the traffic announcement can be adjusted with the volume control. The adjusted volume setting will be applied to subsequent announcements.

- Press the function button **Cancel** to end the current traffic announcement. The TP function remains activated.
- **OR:** Press the function button **Deactivate** to end the current traffic announcement and permanently deactivate the TP function. This can be reactivated in the setup menu.

## Setup (FM, AM, DAB)

### FM setup

- Select the **FM** frequency band by pressing the Infotainment button **RADIO**.
- Press the function button **Setup** to open the menu **FM setup**.

#### Function button: function

**SCAN**: Scan function. When the scan function is active, all available stations on the current frequency band are played in sequence for approximately 5 seconds » page 16.

**Search mode**: determines the setup of the buttons with arrows **←** and **→**. This setting applies to all frequency bands (FM, AM and DAB).

**Preset list**: All stored stations on the selected frequency band can be selected with the arrow buttons.

**Station list**: All available stations on the selected frequency band can be selected with the arrow buttons.

**Sort by**: to choose the mode in which the stations will be arranged<sup>a1</sup>.

**Group**: sort by station group.

**Alphabetical**: sort by alphabetical order.

**Traffic station (TP)**: The TP function (traffic news station tracking) is active » page 16<sup>a1</sup>.

**Delete memory**: to delete all or some of the stored stations.

#### Function button: function

**Advanced settings**<sup>a1</sup>:

**Radio Data System (RDS)**<sup>a1</sup>: Radio Data System (RDS) enabled » page 13. With the checkbox deselected , the functions depending on the RDS system will not be available. The function buttons depending on the RDS system will remain inactive (in grey).

**Alternative frequency**: the automatic station tracking is active. With the checkbox deselected  the function button **Regional RDS** remains inactive (grey).<sup>a1</sup>

**Regional RDS**: determines the setup for the regional automatic station tracking via the RDS » page 13<sup>a1</sup>.

**Fixed**: the unit only switches to alternative frequencies for the selected station if the same regional service is being broadcast.

**Automatic**: the unit always switches to the station's frequency that currently offers the best reception. As a result, regional programmes may be interrupted.

<sup>a1</sup> This depends on the country and unit in question.

### AM setup

- Select the **AM** frequency band by pressing the Infotainment button **RADIO**.
- Press the function button **Setup** to open the menu **AM setup**.

#### Function button: function

**SCAN**: Scan function. When the scan function is active, all available stations on the current frequency band are played in sequence for approximately 5 seconds » page 16.

**Traffic station (TP)**: The TP function (traffic news station tracking) is active » page 16.

**Search mode**: determines the setup of the buttons with arrows **←** and **→**. This setting applies to all frequency bands (FM, AM and DAB).

**Presets**: all stored stations on the selected frequency band can be selected with the arrow buttons.

**Stations**: All available stations on the selected frequency band can be selected with the arrow buttons.

**Delete memory**: to delete all or some of the stored stations.

### DAB setup

- Select the **DAB** frequency band by pressing the Infotainment button **RADIO**.
- Press the function button **Setup** to open the menu **DAB setup**.

#### Function button: function

**SCAN**: Scan function. When the scan function is active, all available stations on the current frequency band are played in sequence for approximately 5 seconds » page 16. »

## Function button: function

**Search mode**: determines the setup of the buttons with arrows **[←]** and **[→]**. This setting applies to all frequency bands (FM, AM and DAB).

**Presets**: all **stored** stations on the selected frequency band can be selected with the arrow buttons.

**Stations**: All **available** stations on the selected frequency band can be selected with the arrow buttons.

**VIEW**: to select the type of view of the DAB station list.

**Set**: hierarchical view of stations and ensembles in alphabetical order.

**Stations**: overall view of stations in alphabetical order.

**Traffic station (TP)**: The TP function (traffic news station tracking) is active »» page 16 .

**Delete memory**: to delete all or some of the stored stations.

**Advanced settings**: DAB services setup.

**DAB traffic reports**: DAB traffic announcements are played in the same way as TP traffic announcements in all operating modes.

**Other DAB announcements**: DAB announcements (news, sport, weather, warnings etc.) will interrupt the current DAB radio mode.

**DAB-DAB programme tracking**: automatic station tracking within the DAB frequency band has been activated.

## Function button: function

**Automatic switch DAB - FM**: switching to FM frequency band is allowed for automatic station tracking.

## Media

### Media mode

#### Introduction




**Media sources** are audio sources containing audio files on various different data storage devices (e.g. SD memory card, USB, external MP3 player, etc.). These audio files can be played by the infotainment system from its corresponding drives or audio input sockets (memory card slot, AUX-IN multi-media socket etc.)

#### Note

- The audio coding technology MPEG-4 HE-AAC and patents have a Fraunhofer IIS licence.
- This product is protected by copyright and property rights of Microsoft Corporation. Using or distributing similar technology outside of this product without a licence from Microsoft or any of its authorised subsidiaries is prohibited.
- The infotainment system only plays undamaged compatible audio files; other files are ignored.
- Consult the list of supported devices on the web.

#### Requirements for the media sources and audio files

The supported file formats listed are collectively referred to below as “audio files”.

Media sources	Requirements for playing in the unit
 SD and MMC Memory cards compatible with the FAT12, FAT16, FAT32, XFAT or VFAT file system (max. 2 GB) along with SDHC and SDXC cards.	<ul style="list-style-type: none"> <li>– MP3 files (.mp3) with a rate of 8 to 320 kbit/s or variable.</li> <li>– WMA files (.wma) of up to 9.2 mono/stereo with no copy protection.</li> <li>– Playlists in PLS, M3U, WPL and ASX formats.</li> <li>– Playlists no larger than 1000 elements or 20 kB.</li> <li>– File names and addresses no larger than 256 characters.</li> <li>– On memory cards: a maximum of 1000 folders and 2048 files.</li> </ul>
 USB data storage device with 2.0 specification, compatible with the FAT12, FAT16, FAT32, or VFAT file system (max. 2 GB).	<ul style="list-style-type: none"> <li>– The external media player must support the Bluetooth® profile A2DP.</li> </ul>
 Audio file playback via Bluetooth® <sup>a1</sup> .	

<sup>a1</sup> Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

#### Restrictions and instructions

Contamination, exposure to high temperatures and mechanical damage may render a

data medium unusable. Please observe the manufacturer's instructions.

Variations in the quality of data media produced by different manufacturers may lead to anomalies during playback.

Please observe copyright laws.

The unit may be unable to read individual tracks or the entire data medium due to the data medium configuration or the devices and programs used for recording. Information can be found on the internet regarding the best ways to create audio files and data media (compression rate, ID3 tag etc.).


Depending on the size, its condition due to use (copy and delete processes), the folder structure and file type, the read time of the data media used can vary considerably.

Playlists only determine a certain playing order. There are no files stored in a playlist. The unit will not play a playlist if the files are not on the data medium at the locations referred to by the playlist (relative file paths).

#### Note

- Do not use adaptors for memory cards.
- We will not accept any responsibility for files damaged or lost on the data medium.

## Playing order of files and folders

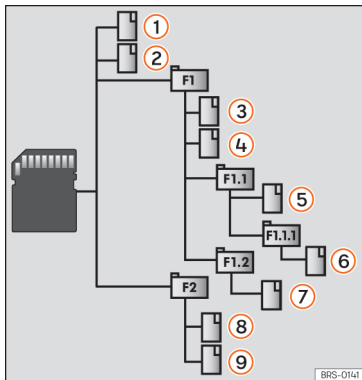

**Fig. 13** Possible structure of an audio data storage device.

Audio files on data media are often organised by means of folders and playlists, to determine a certain playing order.

Tracks, folders and playlists on a data medium are sorted by name in alphabetic or numeric order.


The diagram shows an example of a conventional audio data storage device containing tracks, folders and subfolders » **Fig. 13** that are played in the following way:<sup>1)</sup>

1. Track 1 and 2 in the root directory of the data storage device
2. Track 3 and 4 in the **first** folder F1 of the root directory of the data storage device
3. Track 5 in the **first** subfolder F1.1 of the folder F1
4. Track 6 in the **first** subfolder F1.1.1 of the subfolder F1.1
5. Track 7 in the **second** subfolder F1.2 of the folder F1
6. Tracks 8 and 9 in the **second** folder F2

### **i** Note

- The play order can be modified by selecting between the different playback modes » page 20.
- The playlists are not activated automatically; they must be selected from the track selection menu » page 22.

## MEDIA main menu

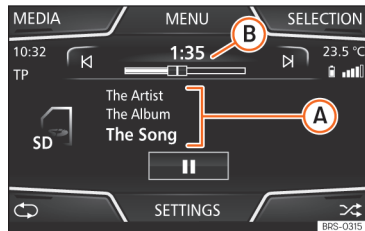

**Fig. 14** MEDIA main menu.

Through the main menu **MEDIA** you can select and play different Media sources.

- Press the infotainment button (**MEDIA**) to open the **Radio** main menu » **Fig. 14**.

It will continue playing the last media source selected from the same point.

The media source being played is indicated on the dropdown list when the **MEDIA** function button is pressed » **Fig. 15**.

If there is no Media source available, the **ME-DIA** main menu is displayed.

<sup>1)</sup> In the Media settings menu the function **Mix/Repeat incl. subfolders** must be activated.

## Function buttons of the main menu Media

Function button: function	
<b>MEDIA</b>	Click to select a different media input »» page 21. <b>SD card</b> : SD memory card »» page 23. <b>Bluetooth audio</b> : Bluetooth audio® »» page 25. <b>USB</b> : USB storage device »» page 24. <b>AUX</b> : external audio input »» page 26.
<b>SELECTION</b>	Opens the track list »» page 22.
<b>◀ or ▶</b>	Changes track in Media mode or fast forward/rewind »» page 22.
<b>⏸</b>	Playback will stop. The function button <b>⏸</b> changes to <b>▶</b> »» page 22.
<b>▶</b>	Playback will continue. The function button <b>▶</b> changes to <b>⏸</b> »» page 22.
<b>SETTINGS</b>	Opens the menu <b>Media settings</b> »» page 26.
<b>↺</b>	Repeat all tracks. Repeats all the tracks that are on the same memory level as the track being played at that moment. If <i>Mix/Repeat/Scan including subfolders</i> is active in the <b>Media Settings menu</b> , the sub-folders will also be included.
<b>↻</b>	The current track will be repeated.
<b>⤺</b>	Random play.

## Information and possible icons

Display: Meaning	
<b>A</b>	Track information indication (ID3 tag in MP3 files). »» Fig. 14 Audio files: indicates <b>name of the artist and track title</b> .
<b>B</b>	Playing time so far. »» Fig. 14 The time bar allows you to select the desired playing time.
<b>RDS</b>	RDS radio data service deactivated. The RDS can be activated in the menu <b>Setup (FM, AM)</b> »» page 17.
<b>TP</b>	The TP is active and receiving »» page 16.
<b>⊘</b>	No traffic announcement station can be received.
<b>i Note</b>	
<b>When the media source is inserted, playing will not start automatically; it is necessary for the user to select the source. Nor will the media source change when it is ejected.</b>	

## Changing the media source



Fig. 15 Changing media source.

- In the **MEDIA** main menu, press the infotainment (**MEDIA**) button several times to skip through the available Media sources.
- **OR:** In the main menu, press the **MEDIA** button »» Fig. 15 and select the required media source.

In the pop-up window, the media sources not selected are shown as deactivated [in grey].

When a media source that has already been played is selected again, playback is resumed from the point at which it was stopped.

## Media sources that can optionally be selected

## Function button: media source

**SD card**: SD storage card »» page 23.

»

## Function button: media source

**[USB]**: USB storage device » page 24.

**[BT Audio]**: play audio through Bluetooth® » page 25.

**[AUX]**: External audio source connected to the AUX-IN multimedia socket » page 26.

## Change the track in the MEDIA main menu

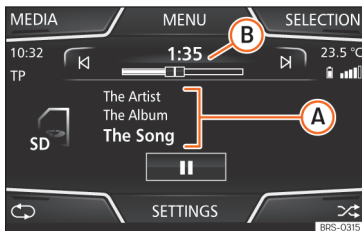


Fig. 16 MEDIA main menu.

It is possible to browse through the tracks of the media source that is currently playing using the **[K]** or **[D]** buttons.

It is not possible to exit a playlist or start the playback of a playlist using the **[K]** or **[D]** buttons. Both actions must be performed manually from the track selection menu.

## Controlling playback via the MEDIA main menu

Use	Effect
Briefly pressing the function button <b>[K]</b> once.	Goes to the start of the current track. If the track has been playing for less than 3 seconds, it skips to the beginning of the previous track.
Briefly pressing the function button <b>[K]</b> two consecutive times.	If the track has been playing for more than 3 seconds, it skips to the beginning of the previous track. And, where applicable, it skips from the first track to the last one on the data storage device being played.
Briefly pressing the function button <b>[D]</b> once.	Goes to the next track. It changes from the previous track to the first track of the data storage device being played.
Keeping the function button <b>[K]</b> pressed.	Fast rewind.
Keeping the function button <b>[D]</b> pressed.	Fast forward.

## Select a track from the list

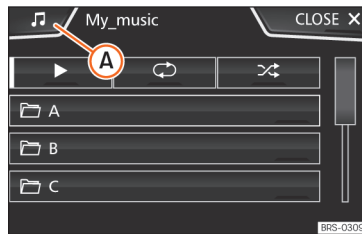


Fig. 17 Folder list.

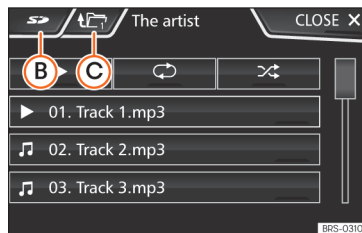


Fig. 18 List of audio files.

## Open the audio/folder file list.




- In the **MEDIA** main menu, press the **SELECTION** button » Fig. 17 to open the track list. The track being played appears highlighted » Fig. 18.

Search and press on the track/folder list or on the desired track/folder. If there is information available, the track name is displayed (for audio CDs) or the name of the file (MP3) instead of **Track + number**.

#### Function button: Function

<b>A</b> »» Fig. 1 7	Open the Source menu. Press to select other media sources.
<b>B</b> »» Fig. 1 8	Indicates the media source being browsed. If pressed it goes to the root folder of the device indicated on the icon.
	<b>[SD card]</b> : SD storage card »» page 23.
	<b>[USB]</b> : USB storage device »» page 24.
	<b>[BT Audio]</b> : play audio through Bluetooth® »» page 25.
	<b>[AUX]</b> : External audio source connected to the AUX-IN multimedia socket »» page 26.
<b>C</b> »» Fig. 1 8	Press the function button to open the top folder in the hierarchy of the media source. After being pressed several times the currently selected media source appears; press to check the source contents; press to check the source contents. The number appearing on the folder indicates the level in the directory »» Fig. 18.
<b>▶</b>	Start playback with the first track.

#### Function button: Function

	Repeat all tracks. Repeats all the tracks that are on the same memory level as the track being played at that moment. If in the <b>Media Settings</b> menu the <input checked="" type="checkbox"/> <b>Mix/Repeat including subfolders</b> option is enabled, it also includes the subfolders.
	Repeat the current track.
	Random play. Includes all the tracks that are on the same memory level as the track being played at that moment. If in the <b>Media Settings</b> menu the <input checked="" type="checkbox"/> <b>Mix/Repeat including subfolders</b> option is enabled, it also includes the subfolders.

#### **i** Note

**The tracks, folders and playlists can also be selected by turning the right-hand setup button, and can be played or opened by pressing it.**

## Inserting and removing memory cards

### Inserting a memory card

Insert a compatible memory card into the memory card slot with the bevelled edge first and facing right until the card clicks into place »» Fig. 1 9.

If a memory card cannot be inserted, make sure it is positioned correctly and is compatible with the unit.

### Removing a memory card

The inserted memory card must be prepared for removal.


- In the **MEDIA** main menu, press the **[SETTINGS]** button to open the **Media Settings** menu. **Or:** Press the Infotainment button **[MENU]**; then press **[SETTINGS]** to open the **System settings** menu.
- Press the function button **[Remove SD card safely]**. After the system closes the memory card, a message will appear on the screen indicating that the card can be removed.
- Press the inserted memory card. The memory card “jumps” to the eject position.
- Remove the memory card.

### Unreadable memory card

If a memory card is inserted and the data cannot be read, the relevant warning appears.

## External data storage device connected to USB port

Depending on the the features and the country, the vehicle may have a USB - AUX-IN connection. For their location, consult the **»» Booklet Instruction Manual**.

Audio files on an external data storage device connected to the USB port  can be played and controlled via the Infotainment system.

Where this manual refers to external data storage devices, this means USB mass storage devices containing supported audio files, such as MP3 players, iPods™ and USB sticks.

Only supported audio files are displayed and played. Other files are ignored.

Further operation of the external data medium (changing track, selecting tracks and playback modes) is described in the appropriate chapters of this manual **»» page 19**.

### Instructions and restrictions

 
Compatibility with Apple™ devices and other media players depends on the unit.

The USB port  supplies the usual USB voltage of 5 volts for a USB connection.

External hard disks with a capacity greater than 32 GB must be reformatted for the FAT32 file system in some circumstances. You will find the necessary software and information on the Internet.

Take into account all other instructions and limitations regarding requirements for media sources **»» page 19**.

### iPod™, iPad™ and iPhone™

Depending on the country and the equipment, iPods™, iPads™ or iPhones™ can be connected using the device's USB cable to the USB port  of the vehicle and used as audio sources.

After connecting an iPod™, iPad™ or iPhone™, the specific list views of the iPod are displayed in the upper selection level ( **Playlists**,  **Artists**,  **Albums**,  **Tracks**,  **Podcasts** etc.).

## Possible error messages after connecting an external data storage device<sup>1)</sup>

The device is not compatible	
Cause	Procedure
The external data carrier cannot be played or communication is not possible with the adapter cable being used.	Check the connection and make sure the external data storage device is working correctly. If possible, update the external data storage device software.

The device does not work	
Cause	Procedure
Communication fault.	Check the connection and make sure the external data medium is working correctly.

### Disconnecting

Any connected data storage devices **must** be prepared before their disconnection in order to remove them.

<sup>1)</sup> Due to the large number of different data storage devices and various iPod™, iPad™ and iPhone™ generations available, it is not possible to guarantee fault-free operation of all functions described here.

- In the Media main menu, press the **SETTINGS** button to open the **Media Settings** menu.
- Press the **Safely remove USB device** function button. After the system has closed the USB device, a message will appear on the screen indicating that the device can be removed.
- Now the data storage device can be disconnected.

#### **i Note**

- **Do not connect an external media player at the same time to play music via Bluetooth® and via the USB port with the Infotainment system, as this could cause playback limitations.**
- **If the external player is an Apple device™, it cannot be simultaneously connected by USB and by Bluetooth.**
- **If a connected device is not recognised, disconnect all the connected devices and try connecting the device again.**
- **Do not use memory card adaptors, USB extension cords or USB hubs!**

## **Connect external audio source via Bluetooth®**

In Bluetooth® audio mode, audio files from an external audio source that is connected via

Bluetooth®, for example a mobile telephone (Bluetooth® audio playback), can be played over the vehicle speakers.

### **Conditions**

- The Bluetooth® audio source must support the A2DP Bluetooth® profile.
- In the **Bluetooth® settings** menu, the  **Bluetooth® Audio (A2DP/AVRCP)** function must be activated.

### **Starting Bluetooth® audio transmission**

- Activate Bluetooth® visibility on the external Bluetooth® audio source (e.g., mobile telephone).
- Lower the base volume on the Infotainment system.
- Press the infotainment **MEDIA** button.
- Click on the **(MEDIA)** function button and select **(BT Audio)**.
- Press **(Search for new device)** in order to connect an external Bluetooth® audio source for the first time »» page 28.
- **OR:** Select a Bluetooth® external audio source from the list.
- Please refer to the instructions on the screen of the Infotainment system and on the Bluetooth® audio source regarding the rest of the procedure.

You may still need to manually start playback on the Bluetooth® source.

When playback on the Bluetooth® audio source is stopped, the Infotainment system remains in Bluetooth® Audio mode.

### **Controlling playback**

The extent to which the Bluetooth® audio source can be controlled via the Infotainment system depends on the connected Bluetooth® audio source.

The available functions will depend on the Bluetooth® Audio profile that the connected external player supports.

With media players that support the AVRCP Bluetooth® profile, playback on the Bluetooth® audio source can be automatically started or stopped when the unit is switched to Bluetooth® Audio mode or to a different audio source. In addition, it is possible to view or change the track via the Infotainment system.

#### **i Note**

- **Due to the large number of different Bluetooth® audio sources available, it is not possible to guarantee fault-free operation of all functions described here.**
- **Deactivate the service and warning sounds of a connected Bluetooth® audio source (for example, the key tones of the mobile telephone) to avoid interference noise and anomalies in the operation.**

»

- Depending on the external player connected, the response time of the system can vary.
- Do not connect an external media player at the same time to play music via Bluetooth® and via the USB port with the Infotainment system, as this could cause playback limitations.
- If the external player is an Apple™ device, it cannot be simultaneously connected by USB and by Bluetooth®.

## Media settings

### Media settings

- Select the *Media* main menu by pressing the Infotainment button (MEDIA).
- Press the function button (Setup) to open the menu **Media settings**.

### Function button: effect

**Traffic station (TP)**: the TP function (traffic announcement tracking) is activated » page 16. If the function button is deactivated (in grey), you must first activate the  **Traffic programme (TP)** function button in the FM Settings menu » page 17.

**Mix/repeat incl. subfolders**: the subfolders are taken into account in the playback mode selected » page 20.

**Bluetooth® setup**: » page 35.

### Function button: effect

**Safely remove the USB device**: the system closes the USB, subsequently enabling it to be ejected safely.

**Safely remove the SD card**: the system closes the SD card, subsequently enabling it to be ejected safely.

## External audio source connected to the AUX-IN multimedia socket

Depending on the equipment and country there may be an AUX-IN multimedia socket » **Booklet Instruction Manual**.

In order to connect the external audio source to the AUX-IN socket, a suitable cable is required with a 3.5 mm jack that is inserted into the AUX-IN socket of the vehicle.

The connected external audio source is played over the vehicle speakers and **cannot** be controlled via the Infotainment system controls.

The connection of an external audio source is indicated by **AUX** on the screen.

### Connecting an external audio source to the AUX-IN multimedia socket

- Reduce the volume of the infotainment system.
- Connect the external audio source to the AUX-IN multimedia socket.

- Start playback on the external audio source.

- In the *MEDIA* main menu, press the (MEDIA) function button and select (AUX).

The **output volume** of the connected external audio source should be adjusted to the volume of the other audio sources » page 41.

### Information on operating an external audio source connected to the AUX-IN multimedia socket

Operation	Effect
Selection of another audio source from the Infotainment system.	The external audio source continues to run in the background.
Stopping playback on the external audio source.	The infotainment system remains in the <b>AUX</b> menu.
Disconnecting the plug from the AUX-IN multimedia socket.	The infotainment system remains in the <b>AUX</b> menu.

### Note

- Please read and observe the manufacturer's instruction manual for the external audio source.
- Interference noise may be heard if the external audio source is powered from the 12-volt power socket of the vehicle.

## Telephone management system\*

### Introduction to the telephone management system

#### General information

The Telephone functions described below can be used through the Infotainment system if there is a mobile telephone connected to it via Bluetooth® » page 29.

In order for the mobile telephone to be able to connect to the Infotainment system the telephone must be equipped with Bluetooth®.

If there is no mobile telephone connected to the Infotainment system, the telephone management system will not be available.

The instructions shown on the screen for the telephone menus will depend on the mobile telephone used. There may be variations.

Only use compatible Bluetooth® devices. For further information on compatible Bluetooth® products, ask your nearest SEAT dealer or check on the internet.

Use the instruction manual of the mobile telephone and of any accessories.

If you detect any operating issues between your mobile telephone and the Infotainment

system, restart your mobile by switching it off and on again.

You may experience poor reception or may be cut off in areas where the signal is weak.

Most electronic devices are shielded against HF (high-frequency) signals. In any case, the electronic equipment may not be protected from the HF signals of the telephone management system. This may cause interference.

#### ⚠ WARNING

**Speaking by telephone and using the mobile telephone management system whilst driving can distract you from the road and cause an accident.**

- Always drive carefully and responsibly.
- Select volume settings that allow you to easily hear signals from outside the vehicle at all times (e.g. emergency services sirens and horns).
- In areas of little or no coverage or, in some cases, in a tunnel, garage or underpass, your call may be cut off and you may not be able to make even emergency calls.

#### ⚠ WARNING

**If a mobile telephone is not secured or is incorrectly secured in the vehicle, it could move around the passenger compartment in the event of a sudden driving manoeuvre or emergency stop, resulting in injury.**

- While the vehicle is in motion, always secure the mobile telephone properly outside the airbag deployment zone.

#### ⚠ WARNING

**Mobile telephones may interfere with and alter the correct operation of pacemakers if they are carried directly over them.**

- Maintain a minimum distance of at least 20 centimetres between the aerials of the mobile telephone and the pacemaker.
- Do not carry your switched-on mobile telephone in your breast pocket directly over the pacemaker.
- If you suspect interference, switch off the mobile telephone immediately.

#### ⓘ CAUTION

**High speeds, poor weather or road conditions and the quality of reception can all affect the audio quality of a telephone conversation in the vehicle.**

#### ⓘ Note

- Restrictions on the use of devices using Bluetooth® technology may apply in some countries. For further information, contact the local authorities.
- If you wish to connect a device to the telephone management system via Bluetooth® technology, consult the safety

»

warnings in its instruction manual. Only use compatible Bluetooth® devices.

### Areas where special regulations apply

Switch off the mobile telephone and the telephone Bluetooth function in places with a risk of explosion. In the majority of cases, these places are signposted, but not always clearly »» ⚠ in **General information on page 27**. They include, for example:

- the vicinity of chemical pipelines and tanks
- The lower decks of boats and ferries.
- In the proximity of vehicles that run on liquid gas (such as propane or butane).
- places where the air is laden with chemicals or particles such as flour, dust or metal powder.
- all other places where the vehicle engine must be switched off.

### ⚠ WARNING

**Switch off the mobile phone in areas with a risk of explosion! The mobile telephone can automatically connect to the mobile telephone network again if it loses the Bluetooth® connection to the telephone management system.**

### ⚠ CAUTION

**In areas where special regulations apply or the use of mobile telephones is prohibited, both the telephone and the telephone management system must be switched off. The radiation produced by the mobile telephone when switched on may interfere with sensitive technical and medical equipment, possibly resulting in a malfunction or damage to the equipment.**

### Bluetooth®

Bluetooth® technology allows a mobile telephone to be connected to your vehicle's telephone management system. In order to use the telephone management system with a mobile telephone with Bluetooth® technology, it is first necessary to pair them.

Some Bluetooth® mobile telephones detect and automatically connect when turning on the ignition if a connection has been previously established. For this to take place the telephone must be switched on and its Bluetooth® function activated, and there must be no active Bluetooth® connection with other devices.

Bluetooth® connections are free.

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

### Bluetooth profiles®

When a mobile phone is connected to the telephone management system, a data exchange takes place via one of the Bluetooth® profiles.

- **Hands-Free Profile (HFP):** When connecting a mobile telephone to the phone manager through the HFP the calls can be managed via the Infotainment system.
- **Audio profile (A2DP):** This profile makes it easier to transmit audio to the infotainment system with stereo quality. This function may require connecting additional profiles for managing and controlling audio playback.
- **Phone book access profile (PBAP):** Serves to download phone book contacts from the mobile telephone to the Infotainment system.

### ⚠ CAUTION

**• To prevent them from being heard through the speakers, the button and mobile telephone alert tones must be disconnected. Where necessary, disconnect the headset from the mobile telephone you wish to connect to the system.**

### Pair and connect a mobile telephone to the Infotainment system

In order to manage a mobile telephone via the Infotainment system, it is necessary to pair both devices **once**.

For your safety, we recommend you make the link when the vehicle is stationary. In some countries it is not possible to perform the pairing with the vehicle running.

#### Conditions

You must guarantee the following setup in the mobile phone and the Infotainment system:

- The ignition must be switched on.
- The **Bluetooth® function** of the mobile telephone and the Infotainment system must be active as well as visibility.
- The **keypad lock** on the mobile telephone must be deactivated.

Follow instructions in the manual for the mobile telephone.

During the pairing process, it is necessary to enter data via the mobile telephone's keypad.

#### Starting mobile telephone pairing

- Make sure the Bluetooth function of the mobile device is active and visible.
- Press the infotainment **PHONE** button.

- Press the **Find telephone** function button.

#### OR:

- Press the infotainment **PHONE** button.
- Press the **SETTINGS** function button.
- Press the **Select telephone** function button and then **Find**.

#### OR:

- Press the infotainment **PHONE** button.
- Press the **SETTINGS** function button.
- Press the **Bluetooth®** function button.
- Press the **Find devices** function button.

#### OR:

- Establish the connection from the settings menu of the mobile telephone.

The name of the Bluetooth® function of your Infotainment system will be displayed in **Setup** > **Bluetooth®** > **Name** »»» **page 35**.

The search process can take up to 1 minute. On the screen the system will dynamically update the names of the Bluetooth devices found.

As soon as the search is completed, the names of the Bluetooth® devices found are displayed on-screen.

- Select the Bluetooth® device you want to connect on the infotainment system. In cer-

tain circumstances, it is possible that to finish the connection between the two devices, you must enter additional data in the mobile telephone and Infotainment system.

- Use your mobile telephone to enter and confirm your PIN code, as indicated in the display of the infotainment system.
- If more Bluetooth® profile pairing requests are received on the mobile telephone, make sure to reply to them.

#### OR:

- Compare the PIN code shown on the display of the Infotainment system with that shown on the mobile telephone. If they match, confirm on **both** devices.

The infotainment system and the mobile telephone will now be connected to each other.

When the pairing has been finalized correctly, the *Telephone* main menu will appear. The phonebook and call lists stored in the mobile phone will be loaded once the requests have been accepted in the mobile phone. The duration of the loading process depends on the amount of data stored on the mobile telephone. After downloading, the data will be available on the Infotainment system. »

### Pairing and connection of mobile telephones

You can pair up to 20 mobile telephones to the Infotainment system, but only one mobile telephone can be connected as hands-free, and this or another device as a Bluetooth audio profile.

When the Infotainment system is switched on, it automatically connects to the last connected mobile telephone. If it is not possible to connect to this mobile telephone, the telephone management system will try to automatically connect to the next mobile telephone on the list of paired devices.

The **maximum** range of the Bluetooth® connection is approx. **10 meters**. The active Bluetooth® connection disconnects if this distance is exceeded. The connection is **automatically** re-established as soon as the device is once again within Bluetooth® range.

If the maximum number of paired devices is reached and you wish to pair another one to the system, it will automatically replace the one least used recently. If you wish to replace it with another one, the user must erase it beforehand. To do so:

- Press the Setup button on the device while in telephone mode.
- Press the **Bluetooth®** function button.
- Activate the **Paired devices** function button.

- In the list of paired devices, press the **Ⓜ** function button next to the mobile telephone to be deleted and then press **Delete** to confirm the process.

#### **i** Note

- It may be necessary to confirm the phonebook data transfer request on the mobile telephone.
- Check that there are no requests pending acceptance in your mobile phone. If there are, this could block some of the functions in the Telephone menu.

## Description of the telephone management system

### Introduction

Some functions and setup can only be performed when the vehicle is stopped and are not available on all mobile telephones.

Using the phone management system, you can connect up to 2 mobile telephones through the Bluetooth® function; two of them connected to the hands-free profile and the same one or a third one connected to the Bluetooth® audio profile.

#### **i** Note

- Using a mobile telephone inside the vehicle may provoke noise in the speakers.
- Some networks may not recognise all language characters or offer all services.

### Phone main menu

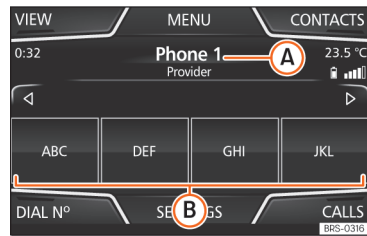


Fig. 19 Phone main menu.

### Assign a user profile

The data from the phonebook, the call lists and the stored speed dial buttons are assigned to a user profile and remain stored on the telephone management system. This information will be available every time the mobile telephone is connected to the telephone management system.

After the first connection, it will take a few minutes for the data from the phonebook of the linked mobile phone to be available in the

Infotainment system. The next time that the mobile telephone is connected (e.g. on the next journey) the phonebook is updated automatically.

If any entries in the mobile phonebook have been modified while connected, a manual update of the phonebook data can be initiated from the **User profile settings** menu » page 36.

Telephone management can store a maximum of 4 user profiles for mobile telephones. If you wish to link/connect another mobile phone, the oldest user profile will automatically be replaced.

### Telephone management system function buttons

- Press the infotainment button **PHONE** to open the *Phone* main menu.

#### Function button: function » Fig. 19

<b>A</b>	Name of connected mobile telephone. Press on the name to access the <b>Select telephone</b> menu.
<b>B</b>	Speed dial buttons for favourites or phonebook shortcut keys depending on the <b>View</b> » page 34.
<b>&lt; and &gt;</b>	Shortcut keys scroll arrows. Allows you to move between the various speed dial/phonebook shortcut banks.


#### Function button: function » Fig. 19

<b>DIAL NUMBER</b>	To open the number pad and enter a telephone number » page 32.
<b>CONTACTS</b>	To open the phonebook of the connected mobile telephone » page 33.
<b>VIEW</b>	Allows you to choose between the display of speed dial and phonebook shortcut keys » page 34.
<b>CALLS</b>	To open call lists of the connected mobile telephone » page 34.
<b>SETTINGS</b>	To open the <b>Telephone settings</b> menu » page 35.


#### **WARNING**

**Remember that the driver must not operate the mobile telephone while driving.**

### Display and symbols of the telephone management system

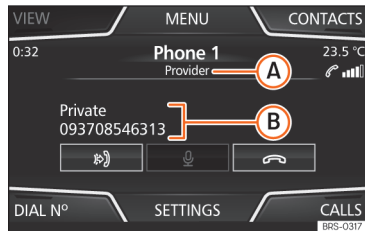

**Fig. 20** Active call.

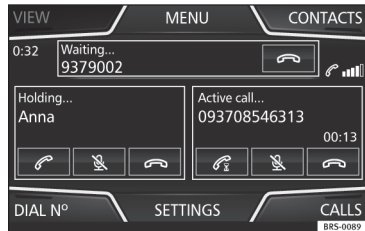



 

 
 


**Fig. 21** Handling of multiple calls.

#### Display: Meaning » Fig. 20

<b>A</b>	Name of the mobile network operator (provider) to which the mobile telephone is connected.
----------	--


## Display: Meaning »» Fig. 20

	View of stored telephone number or name. »» page 35
	Press to <b>accept</b> a call.
	Press to <b>end</b> a call.
	<b>OR:</b> Press to <b>reject</b> an incoming call.
	Press to mute the call signal during a call and to reactivate it.
	Press to mute the microphone during an active call and to reactivate it.
	Charge status of a mobile telephone connected via "Hands-free profile" (HFP) Bluetooth®.
	Strength of coverage signal received by the mobile telephone.

## Private mode

Private mode can only be activated during an active call.

To activate or deactivate private mode:

- Press the  button to activate or deactivate private mode.

With the private mode disabled (by default) the sound of the call is managed by the vehicle. With the private mode enabled the sound is managed by the phone. This configuration is only applicable to the active call, so for

subsequent calls, the audio will revert by default to vehicle's audio system.

## Multiple calls

The telephone management system allows the user to interact with a maximum of three calls on the screen »» Fig. 21.

Only one of the calls may be active.

### Note


**The multiple call function is subject to the services associated with the user's SIM card.**

## Enter telephone number menu




 




**Fig. 22** Enter telephone number menu.

## Open the Enter telephone number menu

Press the  function button from the *PHONE* main menu.

## Possible functions

Enter telephone number	Entering a phone number with the keypad. Press the  function button to make a call.
Select a contact from the list	Enter the first letters of the contact to find using the keypad. The available entries appear in the phonebook. Select the desired contact from the phonebook to make the call.
Redial	Pressing the <b>R</b> button makes a call to the last number dialled.
Breakdown service call 	Press the function button to obtain help in the event of breakdown. For this the network of SEAT dealerships is available to you with their Mobile Service.
Information call 	Press the function button to obtain information on the SEAT brand and the additional services contracted related to traffic and travel.
Call mailbox	Press the  function button to make the call. <b>OR:</b> Press the  function button for about 2 seconds to make a call. If the number for the mailbox has not yet been stored, enter it and confirm with  .

## Note

- Breakdown service and information calls can incur an additional cost on your telephone bill.
- The Roadside Assistance and Information services might not work properly, for example, if the vehicle and the operator of the connected mobile telephone are in different countries. If you are not able to use these services contact an authorised SEAT workshop.

## Phonebook Menu (contacts)

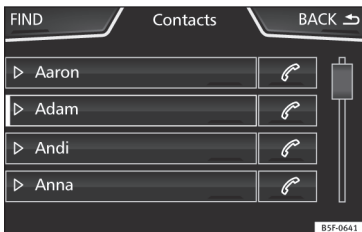


Fig. 23 Contacts Menu.



Fig. 24 Search window.


As soon as the first pairing is performed, it may take some time for the phonebook<sup>1)</sup> data from the paired mobile telephone to be available on the Infotainment system. Depending on the volume of data to be transferred, the process can take several minutes. It may be necessary to confirm the data transfer on the mobile telephone.


The phonebook can also be opened during a telephone call.

In the *Phone* main menu, press the **Contacts** function button to access the phonebook.


## Possible functions


### Select a contact from the list

Search the list and press on the  icon to the right of the desired contact in order to initiate a call.

**OR:** If the contact has several telephone numbers, first press the contact and then the number to be used to make the call. To edit the number before calling, press .

### Searching for a contact in the search window

Press the **Search**  **Fig. 23** function button to open the search window.

Enter the name to be searched for in the window  **Fig. 24**.

The number of matching results is displayed on the left hand side under the input field. Press the **OK** button to change to the list.

Search the list and press the desired contact to make the call.

## Note

**If you edit the number before calling, this will only be used for the call and will not be stored in the phonebook.**

<sup>1)</sup> Depending on the device, only the contacts from the telephone memory are loaded.

## Call Menu (call lists)

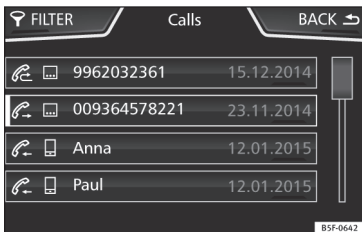


Fig. 25 Call lists menu.

- From the *Telephone* main menu, press the **Calls** function button.
- Press the **FILTER** function button.
- Select the desired call list: **All**, **Missed**, **Dialled** or **Received**.

If a phone number has been stored in the phonebook, the call list will display the name stored instead of the number.

### Possible displays in the Calls menu

#### Display: Meaning

**Missed calls:** Displays the numbers of missed and unanswered calls.

**Dialled numbers:** Indicates the numbers dialled on the mobile telephone and on the Infotainment system telephone management system.

#### Display: Meaning

**Received calls:** Indicates the numbers of the calls received on the mobile telephone and on the Infotainment system telephone management system.

#### Note

The availability of the call lists will depend on the mobile phone used.

## Phonebook shortcut menus

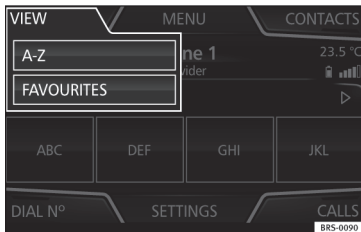


Fig. 26 Phonebook shortcuts.



Fig. 27 Shortcut buttons.

This dropdown menu allows you to select the function of the buttons on the home page, from among »» Fig. 26:

- **A-Z:** Phonebook shortcut keys
- **FAVOURITES:** Speed dial keys.

### Phonebook shortcut keys

You can directly access the contacts in the phonebooks that start with the character selected via these keys.

If there are no contacts that coincide with the chosen character, the entry that immediately follows is displayed.

Pressing multiple times in quick succession will search for the characters shown on the button.

Press and hold the < and > direction arrows to change the letters of the buttons.

## Speed dial keys

The speed dial buttons »» Fig. 27 (A) may each be used to store a telephone number from the phonebook.

All the speed dial buttons must be manually edited and will be assigned to a user profile. Up to 12 favourites can be added to the quick dial buttons.

### Possible functions

<b>Assigning speed dial buttons</b>	<p>Press a <b>free</b> speed dial button from the <i>Telephone</i> main menu.</p> <p>Select the desired contact from the list. If the selected contact has several telephone numbers, select the desired number.</p>
<b>Editing assigned speed dial buttons</b>	<p><i>Press and hold a used</i> speed dial button in the <i>Telephone</i> main menu until the <i>Contacts</i> menu opens.</p> <p>Select the desired contact from the list. If the selected contact has several telephone numbers, select the desired number.</p> <p>To close the <i>Contacts</i> menu without applying the changes, press the <b>(BACK)</b> function button.</p>
<b>Deleting assigned speed dial buttons</b>	<p>The telephone numbers stored in the speed dial buttons can be deleted in the menu <b>User profile settings &gt; Manage favourites</b> »» table on page 35.</p>

### Possible functions

#### Dialling with speed dial buttons

Briefly press an **assigned** speed dial button from the *Telephone* main menu to call the telephone number that has been stored on it.

#### Note

The contacts stored on the speed dial buttons **DO NOT** update automatically. If a contact stored on a speed dial button is modified on the mobile telephone, the speed dial button will need to be re-assigned.

## Telephone settings

Press the **(SETTINGS)** function button from the *Telephone* main menu.

### Function button: function

**(Select mobile phone)**: From the list, select the mobile telephone to be connected to the hands-free profile with the Infotainment system.

**OR**: Press **(Find)** to connect a new mobile telephone.

**(Bluetooth®)**: Open the **Bluetooth® settings** menu »» page 35.

**(User profile)**: Open the **User profile settings** menu »» page 36.

## Bluetooth® settings

In the *Telephone* main menu, press the **(SETTINGS)** function button and then the **(Bluetooth®)** function button.

### Function button: function

**(Bluetooth®)**: Press to deactivate Bluetooth®. Disconnects all active connections.

**(Visibility)**: Activation and deactivation of Bluetooth® visibility.

**(Visible)**: Bluetooth® visibility is active.

**(Hidden)**: Bluetooth® visibility is deactivated. Bluetooth® visibility must be active for the external pairing of a Bluetooth® device with the Infotainment system. If you have a Bluetooth audio device active and playing, the visibility is automatically set to **Hidden**.

**(Name)**: Viewing and changing the name of the Bluetooth® Infotainment system. This will be the name displayed to other Bluetooth® devices.

**(Paired devices)**: Displays paired devices. To disconnect and connect Bluetooth® devices and profiles.

**(Find devices)**: Search for visible Bluetooth® devices within the range of the Infotainment system. The **maximum** range is approx. **10 metres**.

**(Bluetooth® audio [A2DP/AVRCP])**: This function must be active if it is necessary to connect an external audio source via Bluetooth® to the Infotainment system. »» page 25.

## User profile settings

In the *Telephone* main menu, press the **SETTINGS** function button and then the **User profile** function button.

### Function button: function

**Manage favourites**: Editing speed dial buttons.

**Speed dial button in use**: Press to delete the stored number.

**Speed dial button free**: Press to assign a number from the phonebook to the speed dial button in question.

**Mailbox number**: To enter or edit the voice mail number.

**Sort by**: To set the order of appearance of the entries in the phonebook (**Forename** and **surname** or vice-versa).

**Import contacts**: Press to import the phonebook of the connected telephone, or to update the imported phonebook.

**Select ringtone**<sup>a)</sup>: To select a ringtone from a list of predefined melodies (tones). The selected ringtone is played and set up when exiting the submenu.

### Function button: function

**Remember your mobile telephone**: If there is already an active Bluetooth<sup>®</sup> connection with another mobile telephone when turning off the ignition, the following message appears: **"Remember your mobile phone"**.

<sup>a)</sup> Depending on the mobile telephone used, the selected ring tone, or the one set up on the mobile telephone, is played. This function will not be displayed if not supported by the mobile telephone.

### **i** Note

**Some telephones need to be restarted to re-download the most recent contacts added.**

## Car menu

### Introduction to using the Vehicle menu

#### Vehicle Menu

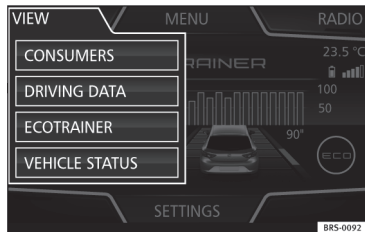


Fig. 28 View menu.

By pressing button **(CAR)** of the infotainment system you will access its main menu with the following options:

- VIEW
- MINIPLAYER, in the top right corner (Radio or Media function if the HDC\* descent control is not active).
- PREVIOUS-NEXT (to change screen)
- SETTINGS »» Booklet Instruction Manual, chapter System setup (Vehicle)

Press the **(CAR)** Infotainment button and the **VIEW** function button to access the following options, described below:

- CONSUMERS
- DRIVING DATA
- ECOTRAINER
- VEHICLE STATUS

#### Consumers

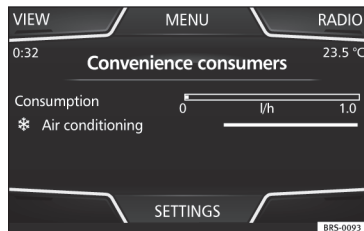


Fig. 29 Consumers menu.

Press the button, Convenience consumers **(ECO)** to access the information on the status of the main convenience consumers of the vehicle. It is shown via a consumption indicator bar in l/h (gal/h).

#### Note

The values that appear in the figure are indicative and may vary depending on the features.

#### Driving data

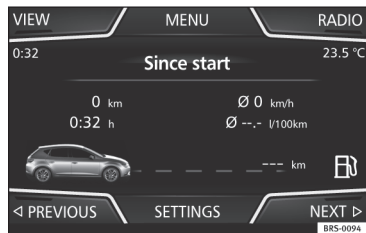


Fig. 30 Driving data menu.

The onboard computer is equipped with 3 memories that work automatically. In these memories you can see the distance travelled, average speed, time passed, average consumption and autonomy of the vehicle.

#### Since start

Indicates and stores the values of the journey completed and the consumption from when the ignition is switched on to when it is switched off. »»

### Since refuelling

Display and storage of the values for the journey and the consumption. By refuelling, the memory will be erased automatically.

### Long-term

The memory records the values for a specific number of partial trips, up to a total of 19 hours and 59 minutes or 99 hours and 59 minutes, or 1999.9 km (or miles) for 9999 km (or miles), depending on the model of instrument panel.

When one of these values is reached (depending on the version of the instrument panel), the memory is automatically deleted and it starts counting from 0 again.

#### **Note**

The values that appear in the figure are indicative and may vary depending on the features.

### Ecotrainer\*

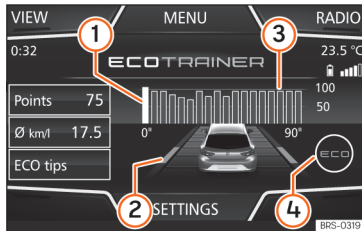


Fig. 31 Ecotrainer menu.

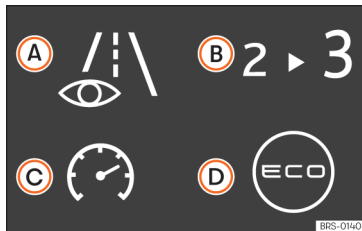


Fig. 32 Driving style symbols.

#### Open ECOTRAINER menu

- When the vehicle is stopped, press the information button **CAR**.
- Press the **VIEW** function button and then select **ECOTRAINER**.

If the corresponding equipment is available, the ECOTRAINER will provide information on driving style. The information on driving style is only evaluated and displayed when moving forward.

#### Score: driving style display

It indicates the efficiency of your driving style since departure from 0 to 1000. The higher the value, the more efficient your driving style. To see more information, press the display. It shows statistics for the last 30 minutes of driving since starting the vehicle. If the car has not yet been driven for 30 minutes, it shows values from the last trip in grey.

#### Ø km/l: Average fuel consumption

Shows the average fuel consumption. The value is calculated by using the kilometres covered since starting the vehicle. To see more information, press the display. It shows statistics for the last 30 minutes of driving since starting the vehicle. If the car has not yet been driven for 30 minutes, it shows values from the last trip in grey.

#### ECO tips: Tips on how to save fuel

By pressing the **ECO tips** function button, you can view tips on how to save fuel. These tips can only be viewed when the vehicle is stopped.

## Evaluation of efficient driving style

The efficiency of the driving style is reflected by different elements on the display.

### Display »» Fig. 31: Meaning

- ① The white column represents the current time. It shows the position of the evaluation that is currently being performed.
- ② Bars to represent acceleration. The position of the car represents the acceleration. If speed is constant, the car remains in the central area. When accelerating or braking, the car moves forward or backward respectively.
- ③ Columns to show the efficiency of the driving style. In the horizon, the columns represent the efficiency of your driving style from the start and they move from left to right every 5 minutes approx. The higher the columns, the more efficient your driving style. The colour of the sky represents the average of the last 3 minutes. The colour changes from grey (less efficient) to blue (more efficient).
- ④ Different symbols can be displayed on the right of the vehicle representation; these provide information on the current driving style. »» table on page 39 .

### Symbols »» Fig. 32: Meaning

- Ⓐ Foresight when driving. If sudden changes of acceleration occur, driving style efficiency is reduced.
- Ⓑ Gear-change indicator.

### Symbols »» Fig. 32: Meaning

- Ⓒ The current vehicle speed is having a negative impact on fuel consumption.
- Ⓓ Ecological driving style.

## Vehicle status

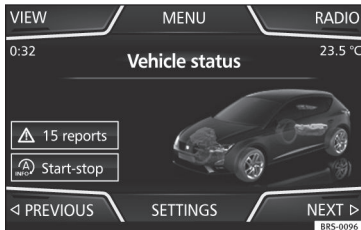


Fig. 33 Vehicle status menu

Press the button, **Vehicle status**, to access the information on the vehicle status messages and the Start-Stop system.

### **i** Note

The values that appear in the figure are indicative and may vary depending on the features.

## Tyres

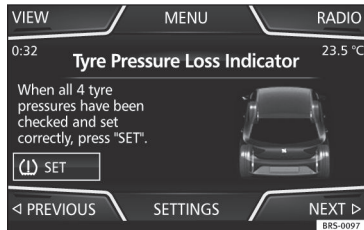


Fig. 34 Tyres menu

By pressing the **< Previous** or **Next >** buttons, the tyre pressure loss indicator will open, to show you the tyre pressure »» Fig. 34.

From this menu, using the **Set** button, the tyre pressures will be stored.

## Settings

### Menu and system settings

#### System setup main menu

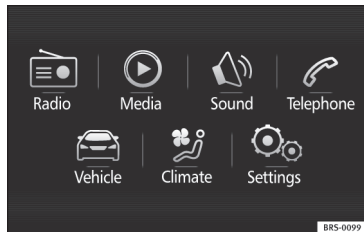


Fig. 35 Main menu

- Press the Infotainment button **MENU** and then press the **Settings** function button.
- Press the function button corresponding to the setup you wish to carry out. Changes are automatically stored when a menu is closed.

#### Function button: effect

**Sound settings**: adjust volume and sound setup » page 41.

**Display**: change screen setup.

**Brightness**: select the brightness level of the screen.

#### Function button: effect

**Show time in standby mode**: in standby mode the current time and date are shown on the display of the Infotainment system.

**Tone when touching the screen**: the feedback when you press a function button on the screen is activated.

**Switch off screen [in 10 s]**: With this function activated, if there is no activity in the infotainment system after this period of time has elapsed, the screen will switch off. When you touch the screen or press an infotainment button, the screen will light up again.

**Time and date**: adjust time and date setup.

**Time**: set the time by pressing the arrow buttons **▲** or **▼**.

**Time format**: select the time format (12 or 24 hour clock).

**Date**: set the date by pressing the arrow buttons **▲** or **▼**.

**Date format**: select the date format.

**Language**: adjusting the language for text. The additional keypad language and the system language can be adjusted separately.

**Additional keypad languages**: to select additional keypad languages.

**Units**<sup>a)</sup>: adjust units of measurement.

**Configuration wizard**: Open the wizard to configure the initial setup of the Infotainment system.

#### Function button: effect

**Factory settings**: When resetting factory settings, all **entries and changes made** are **deleted**, depending on the selected setup.

**Bluetooth®\***: adjust Bluetooth® setup » page 35.

**System information**: indication of the system information (device number, hardware and software version).

**Copyright**: message with radio software licensing information.

<sup>a)</sup> See vehicle instruction manual, Vehicle menu settings.

#### **i** Note

**For all the infotainment systems to work properly, it is important to set the correct time and date in the vehicle.**

## Sound and volume setup

### Making settings

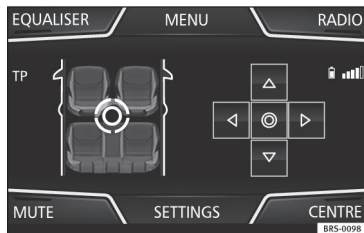


Fig. 36 Sound setup menu

Depending on the country, the unit and the vehicle equipment, there may be differences in the variety of settings.

- Press the Infotainment button **(SOUND)** to open the **Sound setup** main menu. You can also use the **(MENU)** button and select **(Sound)**.
- Press the function button corresponding to the setup you wish to carry out.

All settings are applied instantaneously.

### Summary of the indications and function buttons

#### Function button: effect

**(Balance - Fader)**: adjust the orientation of the sound (balance/fader). The circle displays the current orientation of the sound inside the vehicle. To centre the orientation of the sound in the passenger compartment, press the button represented by two circles, located between the arrows, or press the **(CENTRE)** button or adjust progressively using the **arrow** buttons. This function can be modified in the **(SOUND)** menu.

**(Equalise)**: adjust sound setting characteristics (bass, mid-range and treble). Press reset to lower the equaliser level to 0.

**(Mute)**: function button to activate MUTE.

**(Miniplayer)**: in the top right corner MINIPLAYER (Radio or Media mode).

**(Settings)**: opens the **Sound setup** menu

**(Maximum switch-on volume)**: to set the maximum switch-on volume of the equipment.

**(Traffic announcements)**: to set the playback volume of the incoming messages (for example, traffic announcements).

**(Speed-dependent volume)**: determine the volume setting depending on the speed. The audio volume increases automatically as speed increases.

**(Fade Entertainment volume when parking)**: to adjust the desired decrease in volume with ParkPilot activated.

#### Function button: effect

**( Tone when touching the screen)**: the feedback when you press a function button on the screen is activated.

**(AUX volume)**: to set the playback volume of the audio sources connected via AUX.

**(Bluetooth® Audio)**: configure Bluetooth® audio volume.



## Index

## A

Areas where special regulations apply .....	28
AUX-IN .....	26
AUX-IN multimedia socket .....	26
external audio source .....	26
AUX-IN multimedia socket .....	26

## B

Balance .....	41
Base volume	
change .....	8
mute .....	8
Bass .....	41
Bluetooth audio® (external audio source) .....	25
Bluetooth®	
profiles .....	28
settings .....	35
BT audio .....	25

## C

Call lists .....	34
Call mailbox .....	32
CAR .....	37
CAR menu .....	37
Controls .....	4

## D

DAB .....	14
DAB+ .....	14
Delayed switch-off .....	8
Dial number .....	32

Dial (telephone number) .....	32
Digital radio	
DAB .....	14
DAB+ .....	14
DMB audio .....	14
DMB audio .....	14

## E

Explosion risk areas	
telephone .....	28
External audio source .....	26
bluetooth® audio .....	25
MEDIA-IN .....	24
external data storage device	
MEDIA-IN .....	24
USB .....	24

## F

Fader .....	41
Favourites (speed dial buttons)	
see Telephone .....	34
Forward .....	22
Function buttons	
see: Function buttons .....	9
Function buttons (softkeys) .....	9
Function buttons (virtual buttons) .....	8



## I

Introduction .....	7
iPad .....	24
iPhone .....	24
iPod .....	24

## M

Main menu	
MEDIA .....	20
Phone .....	30
RADIO .....	12
system .....	40
MEDIA .....	19
AUX-IN multimedia socket .....	26
bit rate .....	19
bluetooth® audio .....	25
change track .....	22
changing the media source .....	21
external data storage device connected to	
USB port .....	24
forward .....	22
instructions .....	19, 20
iPod, iPad and iPhone .....	24
main menu .....	20
MEDIA-IN .....	24
MP3 files .....	19
playing order .....	20
playlists .....	19
requirements .....	19
rewind .....	22
select track .....	22
settings .....	26
USB .....	19
WMA files .....	19
Memory card (SD card) .....	23
Midrange .....	41
Monitoring of traffic information stations (TP) ..	16
Multimedia .....	24, 26

- Multimedia interface
  - AUX-IN ..... 26
  - USB ..... 24
- Mute ..... 8
- O**
- Operating instructions
  - checkboxes ..... 9
  - function buttons ..... 9
  - Unit buttons ..... 9
- Operation
  - Telephone ..... 27, 30
- P**
- Phone
  - contacts ..... 33
  - dial ..... 32, 33
  - enter telephone number ..... 32
  - main menu ..... 30
  - phonebook ..... 33
- Phonebook shortcut keys
  - see Telephone ..... 34
- Play
  - AUX-IN ..... 26
  - external data storage device (USB) ..... 24
- Pop-up window ..... 9
- Q**
- Quick reference guide ..... 7
- R**
- Radio ..... 12
- RADIO
  - filter by station type (PTY) ..... 13
  - frequency bands ..... 15
  - main menu ..... 12
  - memory buttons ..... 15
  - radio data services RDS ..... 13
  - radio text ..... 13
  - scan function (SCAN) ..... 16
  - select, tune and store stations to memory ... 15
  - station name and automatic station tracking ..... 13
- RDS
  - TP (Traffic Program) ..... 16, 17
- Requirements for
  - memory cards ..... 19
  - SD cards ..... 19
- Rewind ..... 22
- Rotary/push knobs ..... 9
- Rotary knobs ..... 8
- S**
- Safety notes ..... 7
- SCAN
  - see scan function ..... 16
- Scan function (SCAN)
  - Radio mode ..... 16
- SD card ..... 23
- Settings ..... 40
  - Bluetooth settings ..... 40
  - Bluetooth® ..... 35
  - display settings ..... 40
  - factory settings ..... 40
  - language ..... 40
  - system ..... 40
  - Telephone ..... 35
  - time and date ..... 40
  - units ..... 40
  - user profile settings ..... 36
- SETTINGS
  - see: Setup ..... 40
- Setup
  - sound ..... 41
  - volume distribution ..... 41
- Sound distribution (Balance/Fader) ..... 41
- Sound setup ..... 41
- Sound (treble/midrange/bass) ..... 41
- Station search
  - see scan function ..... 16
- Switch-on volume ..... 41
- Switching off ..... 8
- Switching on ..... 8
- Symbols used in this manual ..... 9
- T**
- Telephone
  - A2DP ..... 28
  - areas where special regulations apply ..... 28
  - Bluetooth® profiles ..... 28
  - Bluetooth® settings ..... 35
  - call lists ..... 34
  - call mailbox ..... 32
  - connect and disconnect the telephone management system ..... 35
  - connection via the Infotainment system ... 29
  - description of the function ..... 28
  - display and symbols ..... 31
  - explosion risk areas ..... 28
  - favourites (speed dial buttons) ..... 34
  - general information ..... 27
  - GSM network ..... 28

- HFP ..... 28
  - mobile telephone pairing ..... 29
  - pairing of mobile telephone ..... 29
  - pairing via the Infotainment system ..... 29
  - settings ..... 35
  - telephone management system ..... 27, 30
  - user profile settings ..... 36
  - Things to note ..... 26
    - AUX mode ..... 26
  - Touchscreen ..... 9
  - TP (Traffic Program)
    - traffic information station ..... 16
    - traffic news station ..... 17
  - Track search ..... 22
  - Traffic news (TP) station tracking ..... 17
  - Treble ..... 41
- U**
- Unit buttons overview ..... 4
  - Unit buttons (physical buttons) ..... 8
  - Unit overview ..... 4
  - USB
    - cannot be read ..... 24
    - connecting an external data storage device ..... 24
    - error messages ..... 24
    - faults ..... 24
  - USB external data storage device
    - disconnect the storage device ..... 24
  - USB port 
    - iPad management ..... 24
    - iPhone management ..... 24
  - USB port 
    - iPod management ..... 24
- User profile
  - settings ..... 36
- V**
- Volume
  - see base volume ..... 8
  - switch-on volume ..... 41
  - traffic announcements ..... 41
- Volume distribution (Balance/Fader) ..... 41
- W**
- Wireless communication interface ..... 25









SEAT S.A. is permanently concerned about continuous development of its types and models. For this reason we ask you to understand, that at any given time, changes regarding shape, equipment and technique may take place on the car delivered. For this reason no right at all may derive based on the data, drawings and descriptions in this current handbook.

All texts, illustrations and standards in this handbook are based on the status of information at the time of printing. Except for error or omission, the information included in the current handbook is valid as of the date of closing print.

Re-printing, copying or translating, whether total or partial is not allowed unless SEAT allows it in written form.

SEAT reserves all rights in accordance with the "Copyright" Act. All rights on changes are reserved.

© SEAT S.A. - (07/18)