


# **SEAT IBIZA TGI**

# from 2021





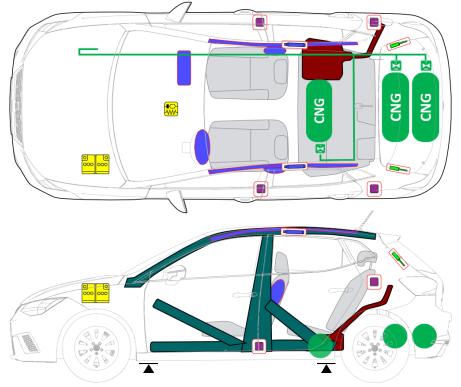

 $\textbf{Note:} \ \ \textbf{The illustration shows the maximum possible range of equipment.}$ 

	The management of the manageme									
	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system	
7	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention			
000000	Battery low voltage	HH	Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve	
0 0	Battery pack, high-voltage	2	High voltage power cable	2	High voltage device that disconnects high voltage		Fuse box disabling high voltage	4	High voltage ultra- capacitor	
	Fuel tank content gasoline/etha nol	CNG	Gas tank with gas type indication (CNG)	CNG	Manual gas shut-off valve with gas type indication (CNG)		Lifting point; central support			

Brand	Туре	Step	Year of market entry	Internal reference	Creation date	Edition	Version no.	Page
SEAT	Ibiza	1	2021	VSS-KJ11T53	14/06/2021	14/06/2021	1	1 of 4



## 1. Identification / recognition

Fuel tank filling point (Gasoline + CNG)



## 2. Immobilisation / stabilisation / lifting

#### Immobilising the vehicle


Automatic gearbox: move selector lever to position "P".

Engage parking brake.





#### Lifting points

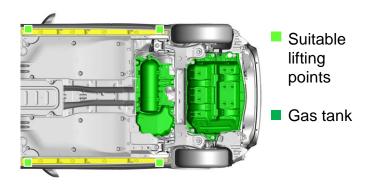

#### 3. Disable direct hazards / safety regulations

#### Switch off motor



If the vehicle is fitted with a "keyless entry" system: Press start-stop button without operating the brake pedal.



A code card or a smartphone app may be used instead of a remote control key.


#### Manual gas tank shut-off



Remove plastic covers.

Locate tank safety valves (see page 1).



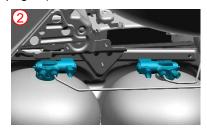

Close the safety valves (5 mm open-end wrench or ring wrench).



### Disconnect the vehicles electrical system (12V battery)






- Open the bonnet.
- Disconnect first the negative wire (-) then the positive wire (+) on the on-board battery.

Brand	Туре	Step	Year of market entry	Internal reference	Creation date	Edition	Version no.	Page
SEAT	lbiza	1	2021	VSS-KJ11T53	14/06/2021	14/06/2021	1	2 of 4



#### 4. Access to the occupants

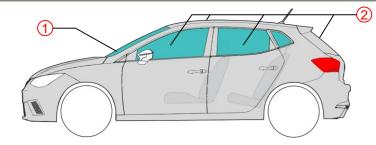

### Glazing:

- 1 Laminated glass
- Single-pane safety glass

## 5. Stored energy / liquids / gases / solids









max. 260 bar









9 I









12 V

#### 6. In case of fire

















The overpressure fuses in the gas tanks open at about 110°C (blowing noise). After approximately 90 seconds, the tanks are empty. Wear suitable personal protective equipment!



#### 7. In case of submersion

After recovering a vehicle from water, let the water drain away. In the event of a gas leak, close the tanks with the shut-off valves (see chapter 3). Wear suitable protective equipment!

## 8. Towing / transportation / storage




- In the event of a gas leak, close the tanks (see chapter 3).
- Do not tow the vehicle using the drive axle.
- Do not damage the gas tanks.

Brand	Туре	Step	Year of market entry	Internal reference	Creation date	Edition	Version no.	Page
SEAT	Ibiza	1	2021	VSS-KJ11T53	14/06/2021	14/06/2021	1	3 of 4





9. Important additional information							
	Guarantee fire protection with adequate means following the instructions of the operations manager.						
***	Collect spilled operating media and liquids as instructed by the Operations Manager, or spread sand / binder around the vehicle to prevent their spread.						
	Avoid direct skin contact with operating fluids and media.						

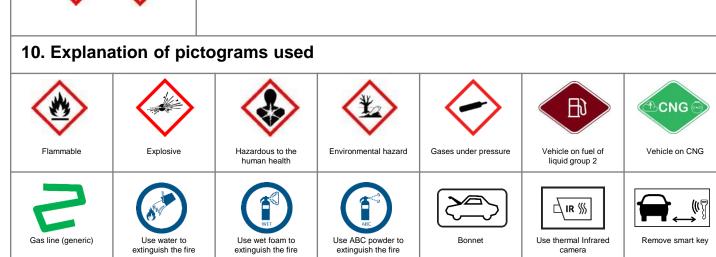

Brand	Туре	Step	Year of market entry	Internal reference	Creation date	Edition	Version no.	Page
SEAT	Ibiza	1	2021	VSS-KJ11T53	14/06/2021	14/06/2021	1	4 of 4